 





Dovetail nipples

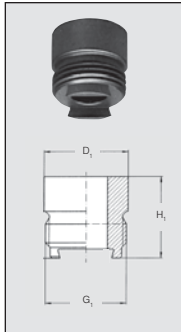

For series	Ordering no.			Dimensions (in.)				Weight (Brass) lb.	
	Type	Material no.			For thread G <sub>1</sub>	H <sub>1</sub>	D <sub>1</sub>		Hex
		303 SS	316 SS	Brass					
660	066. 011	-	○	-	3/8" BSPP	.71	.65	-	.05
664/665	066. 410	-	○	-	3/4" BSPP	1.06	1.10	-	.14


Example    Type    +    Material no.    =    Ordering no.  
 for ordering: 066. 410    +    17    =    066. 410. 17

 Retaining nuts

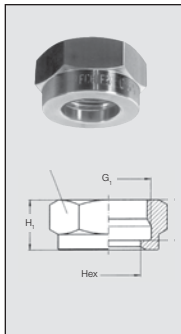

For series	Ordering no.			Dimensions (in.)				Weight (Brass) lb.	
	Type	Material no.			For thread G <sub>1</sub>	H <sub>1</sub>	D <sub>1</sub>		Hex
		303 SS	316 SS	Brass					
660	065. 200	○	○	○	3/8" BSPP	.51	-	1/2"	.06
664/665	065. 600	○	○	○	3/4" BSPP	.51	-	1 1/4"	.13

 Example    Type    +    Material no.    =    Ordering no.  
 for ordering: 065. 200    +    17    =    065. 200. 17

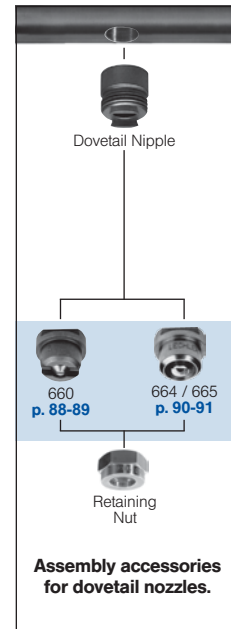

Dovetail nozzles have an automatic alignment guide which requires a matching dovetail base. Once the base is set, the nozzle can be removed and replaced without need to readjust the alignment. Nozzle is secured to the base with a retaining nut.