
Sensor Mounting Shells and Adapters

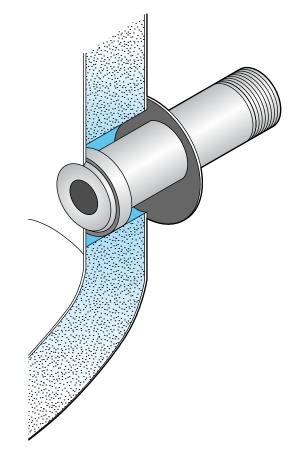

Part Numbers and Applications

Guide to Tank Mounting Shells and Retrofit Adapter Inserts for use with King-Gage[®] AcraSensor and ES2 Transmitter.

KING-GAGE Mounting Shells/Adapters:


Flush Weld Tank Shells	.page 2
2 in. Tri-Clamp Adapter	
2 in. Pipe Mount Adapter	.page 4
Flange Mount Adapter	.page 4

Flush Mount Conversions:

Cherry Burrell Retrofit Adapter.....page 5 Tank-Mate Retrofit Adapterpage 5 Foxboro, Rosemount (Emerson) Adapter ...page 6 Wizard, Floe, Continental Adapter.....page 6 Anderson Instr. Retrofit Adapter.....page 7




Box 1228, Ann Arbor, Michigan 48106-1228 U.S.A. 3201 South State Street, Ann Arbor, Michigan 48108-1625 U.S.A.

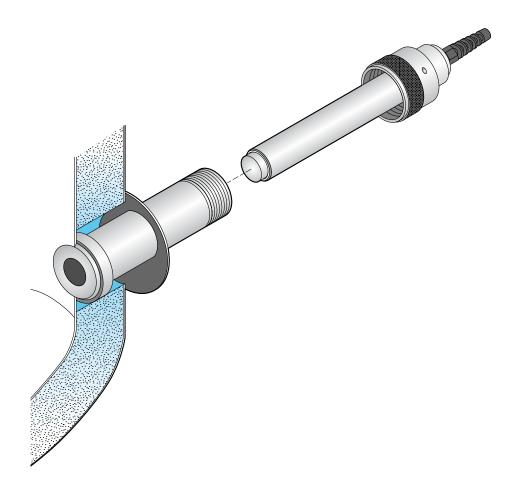

Flush Weld Tank Shells

Receiver for sensor is designed to be flush-welded to the inside tank wall. Provides for flush mounting of sensor in accordance with 3-A Sanitary Standard for CIP (clean-In-Place) installation. Wetted face of shell 316L stainless; all other portions 304 stainless.

Insulated Tank Wall:



Receiver for sensor is designed to be flushwelded to the inside tank wall. Provides for flush mounting of sensor in accordance with 3-A Sanitary Standard for CIP (clean-in-place) installation.

Part Number	Wetted Material	Max. Tank Wall	Len	gth
1777-2	Short Mount 316L stainless steel	n/a	1-7/8 in.	48 mm
1777	Standard Mount 316L stainless steel	4-1/2 in.	6-1/4 in.	159 mm
1777-3	Long Mount 316L stainless steel	6-3/4 in.	8-1/2 in.	216 mm

Insulated tank shells include trim bezel for outer wall

2 in. Tri-Clamp Adapter

External mount adapter mates to Tri-Clover MP-2 in. quick-release sanitary fitting. Adapter package does not include gasket or clamp assembly. Wetted face of shell 316L stainless steel; all other portions 304 stainless steel.

Part Number	Wetted Material	Length		
1749-25	316L stainless steel	1-7/8 in.	48 mm	
1749-27	316L stainless steel	6-1/4 in.	159 mm	




External mount adapter mates to Tri-Clover MP-2" quick release sanitary fitting. Adapter package does not include gasket or clamp assembly. Compatible with ES2 Model 5501 or AcraSensor Model 4501 / 8999-1-3 (short adapter); compatible with ES2 Model 5502 or AcraSensor Model 4502 / 8999-2-3 (standard adapter).

Shell Welding Protector

These shell inserts are used to protect the face of the King shell during the welding and grinding/blending operations.

Part Number	Description
5664-1	Shell Welding Protector



These shell inserts are used to protect the face of the King Shell during the welding and grinding/blending operations.

Shell Plug

Used to seal an installed tank shell or adapter. Permits use of tank prior to sensor installation or when sensor is removed for service.

Part Number	Applications
2584-4	King non-insulated shell (short mount)
2584-3	King insulated shell (standard mount)
	King flange-mount shells
	Tank-Mate adapter (short)
	Cherry-Burrell adapter (short)
	Cont./Floe/Wizard adapter
	Foxboro/Rosemount (short)
2584-6	King insulated shell (long mount)
	Tank-Mate adapter (long)
	Cherry-Burrell adapter (long)
	Foxboro/Rosemount (long)





Used to seal an installed tank shell or adaptor. Permits use of tank prior to sensor installation or when sensor is removed for service.

Pipe Mount Adapter Shells

Mounting adapter mates to 2 in. NPT pipe thread. Specify whether male (NPT-M) or female (NPT-F) adapter is required. Available in 304 stainless steel only.

Part Number	Adapter Thread	Length		
5872-1-2	2 in. NPT-M	7-3/4 in.	197 mm	
5872-2-2	2 in. NPT-F			






Compatible with ES2 Model 5502 standard mount transmitter or AcraSensor Model 4502 / 8999-2-3 standard mount package. Mates to 2" NPT common tapered pipe thread.

Flange Mount Adapter

Adapter mates to 150-lb. ANSI flange (2 in., 3 in., or 4 in. sizes available). Adapter has flat-faced flange 316L stainless steel. Gasket and bolt fasteners are not included.

Part Number	Flange Size/ Material	Len	gth
5627-3	2 in150 lb./316L stainless steel	6-1/2 in.	159 mm
5627-13	3 in150 lb./316L stainless steel	6-1/2 in.	159 mm
5627-23	4 in150 lb./316L stainless steel	6-1/2 in.	159 mm

Compatible with ES2 Model 5502 standard mount transmitter or AcraSensor Model 4502 / 8999-2-3 standard mount package. Adapter mates to 150-lb ANSI flange (2", 3" or 4" sizes as noted). Gasket and bolt fasteners are not included.

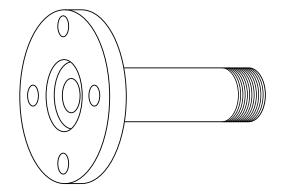


Flush Mount Conversion Adapters

mount package.


Specially designed adapter inserts permit retrofit installation of sensor into existing flush mount shell by other manufacturers. Adapters available in 304 stainless steel only.

Note: We recommend verifying existing shell configurations for dimensional compatibility with intended conversion adapter.

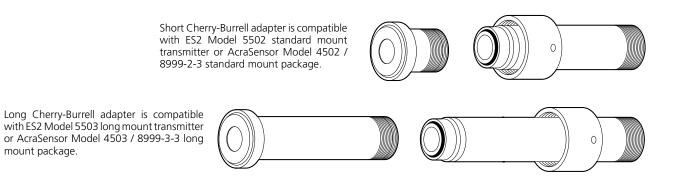


Cherry-Burrell Conversion Adapters

Manufacturer	Part Number	Length		Retrofit Application	King Sensor		
Cherry-Burrell	5640-1	6-1/4 in.	159 mm	Short/Non Insulated	Standard		
	5640-2	8-1/2 in.	216 mm	Standard/Insulated	Long		



Short Tank Mate adapter is compatible with ES2 Model 5502 standard mount transmitter or AcraSensor Model 4502 / 8999-2-3 standard mount package.




Long Tank Mate adapter is compatible with ES2 Model 5503 long mount transmitter or AcraSensor Model 4503 / 8999-3-3 long mount package.

Tank-Mate Conversion Adapters


Manufacturer	Part Number	Length		Retrofit Application	King Sensor
Tank-Mate	5641-1	6-1/4 in.	159 mm	Short/Non Insulated	Standard
	5641-2	8-1/2 in.	216 mm	Standard/Insulated	Long

• Includes: Acorn nuts (both) and spacers (5641-1 only)

Standard Foxboro adapter is compatible with ES2 Model 5502 standard mount transmitter or AcraSensor Model 4502 / 8999-2-3 standard mount package.

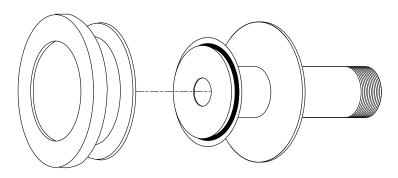


Long Foxboro adapter is compatible with ES2 Model 5503 long mount transmitter or AcraSensor Model 4503 / 8999-3-3 long mount package.

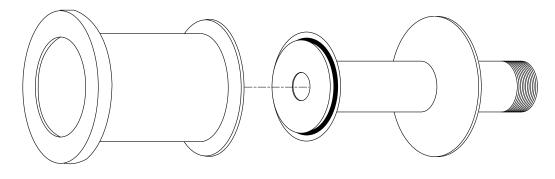

Foxboro Conversion Adapters

Manufacturer	Part Number	Length		Retrofit Application	King Sensor		
Foxboro,	5905-1	6-1/4 in	159 mm	2 in. extension spud	Standard		
Rosemount	5905-2	8-1/2 in.	216 mm	6 in. extension spud	Long		
(Emerson)							




Continental/Floe/Wizard adapter is compatible with ES2 Model 5502 standard mount transmitter or AcraSensor Model 4502 / 8999-2-3 standard mount package. Adapter includes cap screws and O-ring.

Wizard/Continental/Floe Conversion Adapters

Manufacturer	Part No.	Length		Retrofit Application	h King Sensor
Wizard/Cont./	5665-1	6-1/4 in.	159 mm	Insulated Tank or	Standard
Floe				Single Wall Tank	

• Includes: Cap screws

Short adapter for Anderson Instrument is compatible with ES2 Model 5502 standard mount transmitter or AcraSensor Model 4502 / 8999-2-3 standard mount package.

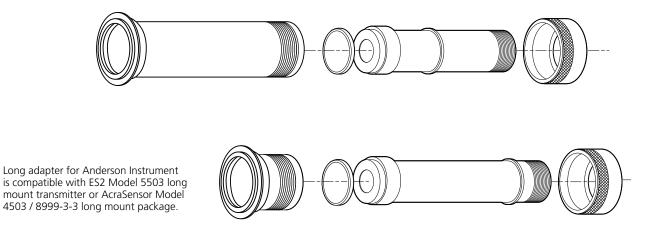

Anderson Conversion Adapters

Manufacturer	Part No.	Length		Retrofit Application	King Sensor
Anderson	5878-1	6-1/4 in.	159 mm	Short/ Non Insulated	Standard
5878-2	8-1/2 in.		216 mm	Standard/Insulated	Long
	•=		21011111	Stariuaru/Insulateu	LUNY

Includes: Clamp ring

AcraSensor and ES2 Transmitter Dimensions




Chart A AcraSensor

/10/1400/100/				
Model Number	Length in Inches	Length in mm		
4501-X-XX	4	102	short	
8999-1-3				
4502-X-XX	8-3/8	213	standard	
8999-2-3				
4503-X-XX	10-5/8	270	long	
8999-3-3				

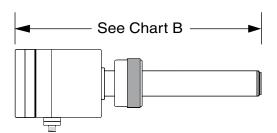


Chart B ES2 Transmitter

Model Number	Length in Inches	Length in mm	
5501-3-XX	5-5/8	143	short
5501-3R-XX			
5502-3-XX	10-1/8	257	standard
5502-3R-XX			
5503-3-XX	11-5/8	295	long
5503-3R-XX			



® King-Gage and the KE emblem are registered trademarks of King Engineering Corporation, Ann Arbor, Michigan, U.S.A.

Specifications are subject to change without notice.

© 2001, 2009 King Engineering Corporation, all rights reserved.